


1107 KSS Push Spacer



- Material: UL approved Nylon 66, 94V-2
- Color: Natural
- Pre-drill the hole on chassis board and press push spacer into it.
- To support and stabilize PC board

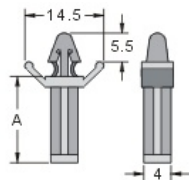

					Unit: mm
	Item No.	A	PCB		Packing
			hole	thickness	
<input type="checkbox"/>	PS-5	4.8	4.8	2.0	100 pcs / Bag
<input type="checkbox"/>	PS-6	6.4	4.8	2.0	
<input type="checkbox"/>	PS-10	9.6	4.8	2.0	
<input type="checkbox"/>	PS-13	12.7	4.8	2.0	
<input type="checkbox"/>	PS-16	15.9	4.8	2.0	
<input type="checkbox"/>	PS-19	19.1	4.8	2.0	
<input type="checkbox"/>	PS-22	22.2	4.8	2.0	
<input type="checkbox"/>	PS-25	25.4	4.8	2.0	
<input type="checkbox"/>	PS-28	28.5	4.8	2.0	
<input type="checkbox"/>	PS-36	35.0	4.8	2.0	

[Input Sample Order](#)

[Check Selected](#)

[Return All Selected](#)